

**Enclosed is your replacement remote control.  
You do not need to return your old  
remote control to DISH Network.\***

# Remote Control Manual

## Replacement Remote Control Set-up

- Insert fresh batteries, making sure to match the plus (“+”) ends with the plus markings on the battery case.
- Turn on the receiver and TV using the front panel buttons.

## To set your new Dish remote to adjust the receiver volume:

*Note: Please make sure the TV sound volume is not turned down or muted before beginning.*

- Press the **Menu** button on the receiver remote.
- Use the **Arrow** buttons to highlight the **System Setup** option, then press the **Select** button.
- Select the **Volume Control** option.
- Select the **DISH Remote Volume Control** option to control volume using your DISH remote. Select **TV Remote Volume Control** to use your existing TV remote to control the volume.
- Highlight and select the **Save** option.

## Using the Remote Control

Press the **Power** button to turn the receiver on or off.

Press **Menu** to open the main menu.

Use the **Page Up** or **Down** arrows to rapidly move through menu or guide information.

Press the **Mute** button to activate the mute function. Press the **Mute** button a second time to restore the sound.

Press the (+) side of the **Volume** button to increase the sound volume and the (-) side to reduce the sound volume.

Press the **Guide** button to view the digital programming guide.

Press the **Up** or **Down** arrows to select channels or navigate through a menu.

Press the **Theme** (Left) arrow to navigate the menus by theme (sports, movies, etc...) and the **Browse** (Right) arrow to view future programming choices.

Press **Select** to activate the item that you have highlighted.

Press **Info** to view more information about a program or the highlighted item.

Press **View** to display the program banner.

Press **Cancel** to quit or exit any menu that you have activated.

Press the **Recall** button to go back to the last channel that you were viewing

Use the numbers on the **Number pad** to go directly to the channel you want to view.

